



Standard Remote Quick Programming Guide



For Potenza ST by Universal Electronics and Innovative Systems

Control the Remote

TV, AUD, DVD, VCR, STB
Use one remote to control multiple devices.

Setup
Use for programming sequences of devices controlled by the remote.

Skip Forward, Skip Back, REW, PLAY, FFWD, STOP, Pause, Record
In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or DVR.

Menu
Displays the menu.

Guide
Opens the Interactive Program Guide.

Day +/-
Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue
Access additional features on your set-top box.

Vol +/-
Raise or lower the volume.

Mute
Turn the sound off or on.

FAV
View your favorite channels.

***Aspect Ratio**
Temporarily change the conversion mode from Original Size or Fit to Screen.

Input
In TV control mode, will change the input of the device you are controlling.

** If Available*



Power
Turn on/off a selected device.

Live
Return to watching live TV.

List
Display a list of recorded, future and series rules on your DVR.

Info
Display the current channel and program information. Press again for more detail.

Browse, Search, Arrow and OK
Navigate and select onscreen choices.

Exit
Exit the current screen.

Page +/-
Page up or down in lists and Interactive Program Guide.

Channel +/-
Changes to the next higher or lower channel.

On Demand
Access video on demand services.

Last
Recall the last channel or option.

Number Keys (0-9)
Directly select a channel or enter options.

Programming Master Power:

The master power programming sets what devices are controlled by the power button.

Procedure:

1. Press and hold SETUP until one of the device keys blinks twice.
2. Enter 9 9 5 on the keypad.
3. Press the POWER button.
4. Press the device keys you want to be controlled by the POWER button.
5. Hold SETUP until the device key blinks twice to complete master power programming.

Programming Remote to Control Devices:

The remote included with your Aurora TV service allows you to control your entire home entertainment system with one remote, avoiding confusion from switching between different device remotes. Before you can control these devices, you must program your remote with the right manufacturer codes for each device.

Simple Set Device Programming:

Simple Set Device programming allows for quick and easy programming of your remote for devices from popular brands.

Procedure:

1. Press and hold SETUP until one of the device keys blinks twice.
2. Press the device key for the device that you wish to program (TV, AUD, DVD, VCR). The device key should stay lit.
3. Point the remote at your device. Press and hold the digit (see table on next page) corresponding to the device brand, until the device turns on/off. (Usually happens very quickly).

Brand Digits:

TV		DVD/VCR		Audio	
Digit:	Brand:	Digit:	Brand:	Digit:	Brand:
1	Insignia	1	Insignia	1	Bose
2	LG	2	LG	2	Denon
3	Panasonic	3	Panasonic	3	LG
4	Philips/Magnavox	4	Philips/Magnavox	4	Onkyo
5	Samsung	5	RCA	5	Panasonic
6	Sanyo	6	Samsung	6	Philips
7	Sharp	7	Sharp	7	Pioneer
8	Sony	8	Sony	8	Samsung
9	Vizio	9	Toshiba	9	Sony
0	Westinghouse	0	Vizio	0	Yamaha

Device Code Search:

The device code search allows you to easily program most brands of devices without knowing the code for the device.

Procedure:

1. Turn on the device you wish to program the remote to control.
2. Press the device key for the device that you wish to program (TV, AUD, DVD, VCR). The device key should blink once.
3. Press and hold SETUP until the device key blinks twice.
4. Enter 9 9 1 on the keypad. The device key should blink twice.
5. Press and release the CH+ key continuously, then stop when the device turns off. This may take many presses.
6. Press POWER. The TV should turn on, then press SETUP once to lock in the code. The LED will blink twice to indicate that the code is saved.

Note: If the TV does not turn on during step 6, then slowly press and release CH- to go back through the codes, then press SETUP when the TV turns on.

Manual Code Entry:

If neither of the above methods above successfully program your remote to control your device, or if you know your device's manufacturer's code, you may use manual code entry to program your remote.

Procedure:

1. Determine the manufacturer's code for the device you wish to program. A reference is available at www.hky.com/s/ISRemoteControl-Guide.pdf with manufacturer's codes beginning at page 27. A printed reference is available upon request.
2. Turn on the device you wish to program.
3. On the remote control, press the device key you wish to program once (TV, AUD, DVD, VCR); it will blink once.
4. Press and hold SETUP until the device key blinks twice.
5. Enter the first four-digit code for your device. If performed correctly, the selected mode key will blink twice.
6. Aim the remote control at the device and press POWER once. The device should turn off. If it does not, repeat steps 2 through 4, trying each code for your brand until you find one that works.

Programming Remote to Control your STB:

Your remote comes pre-programmed to control the set-top box. However, there may be circumstances that require you to program your remote to control your STB.

Procedure:

1. Determine what set-top box type you have and what code is required to control it.

Amino



Code: 1898

Innovative Systems



Code: 1376

2. Press and release the STB key; it will blink once.
3. Press and hold SETUP until the device key blinks twice.
4. Enter the first four-digit code for your STB. If performed correctly, the STB key will blink twice.
5. Aim the remote control at the STB and press POWER once. The STB should turn on or off.

More Information:

For more advanced and in-depth programming instructions, please refer to the remote manufacturer's manual available at:

www.hky.com/s/ISRemoteControl-Guide.pdf

Further resources available at: www.urcsupport.com

*This remote is similar to the UEI Atlas